

Foxhall Lodge

Floor Layout

Ground Floor



Call 0800 027 4832
Email enquiries@foxhallbc.co.uk
Visit www.foxhallbc.co.uk



Foxhall Lodge

Floor Layout

First Floor




Call 0800 027 4832
Email enquiries@foxhallbc.co.uk
Visit www.foxhallbc.co.uk



Foxhall Lodge

Floor Layout

Second Floor

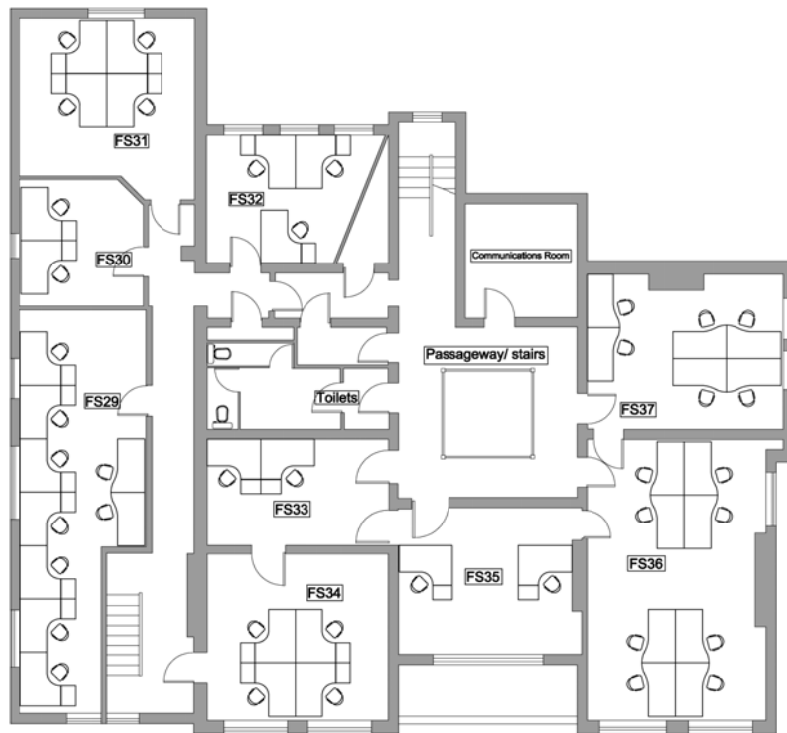

Foxhall Lodge

Call 0800 027 4832
Email enquiries@foxhallbc.co.uk
Visit www.foxhallbc.co.uk

